



## **Montageanleitung**

CWL Luftverteiler DN125-180  
Kunststoff





## **Installation instruction**





CWL Air distributor DN125-180  
plastic





## **Инструкция по монтажу**

CWL Воздухораспределитель DN 125-180  
пластмассовый

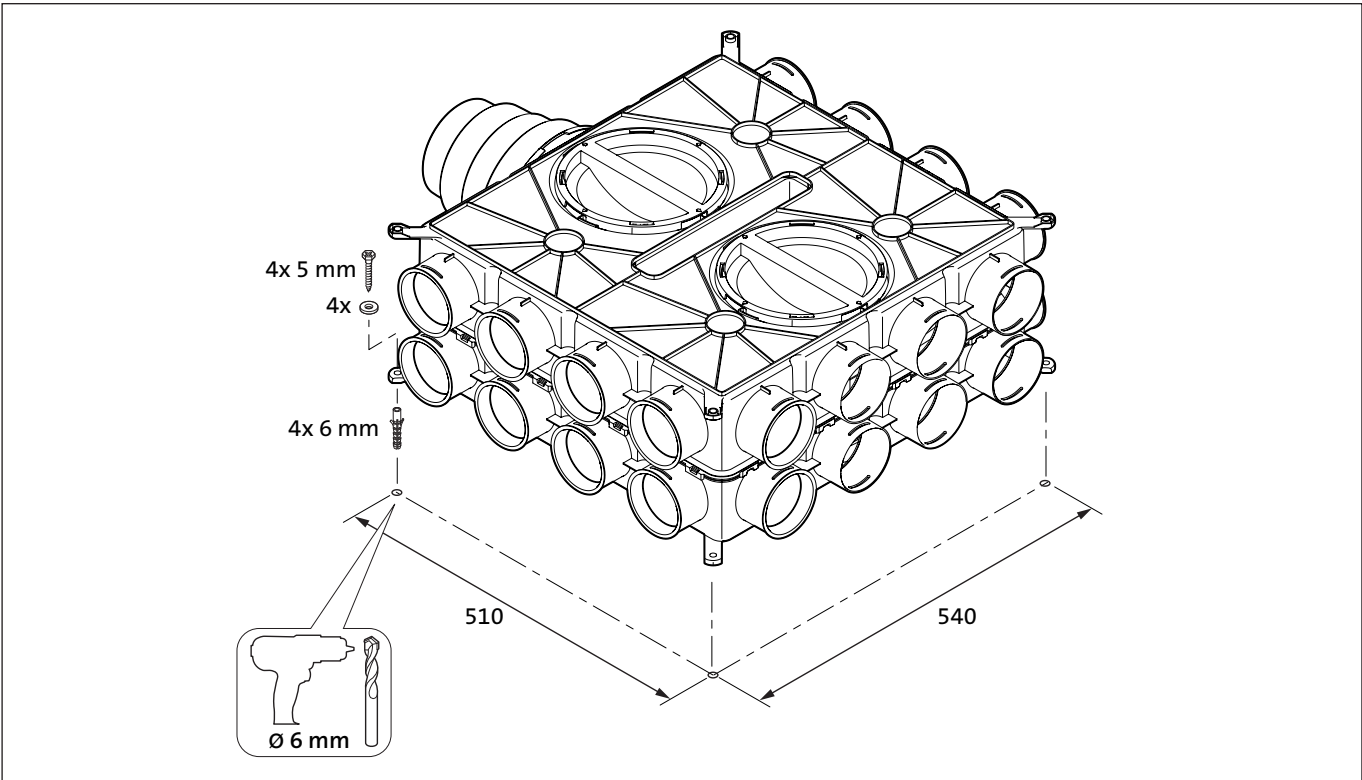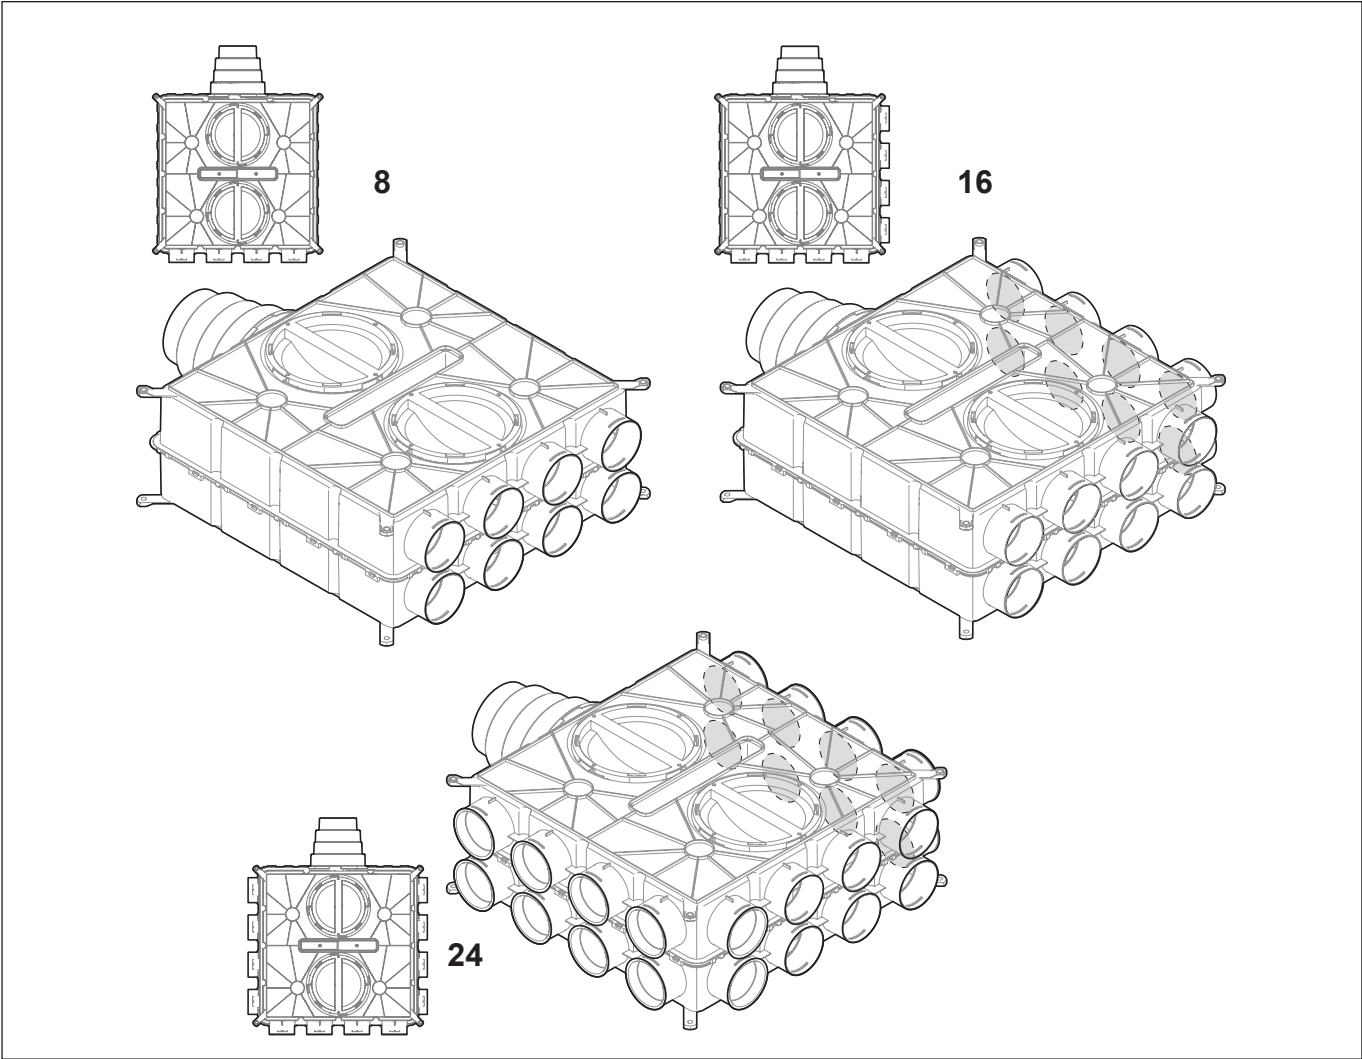


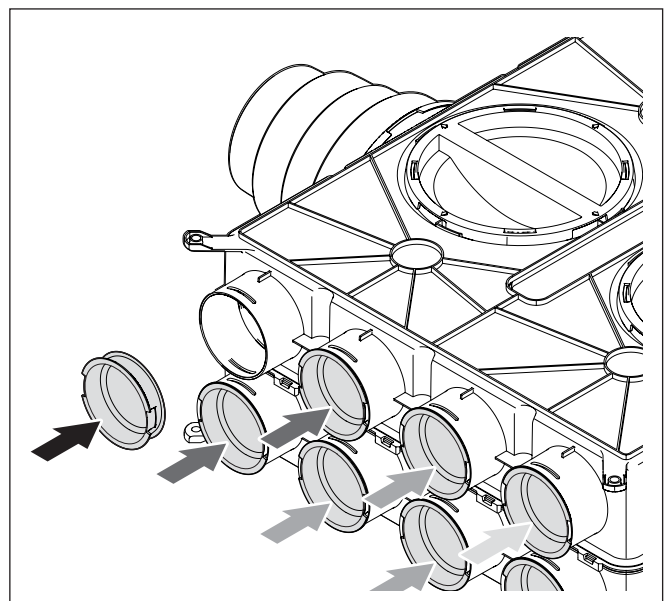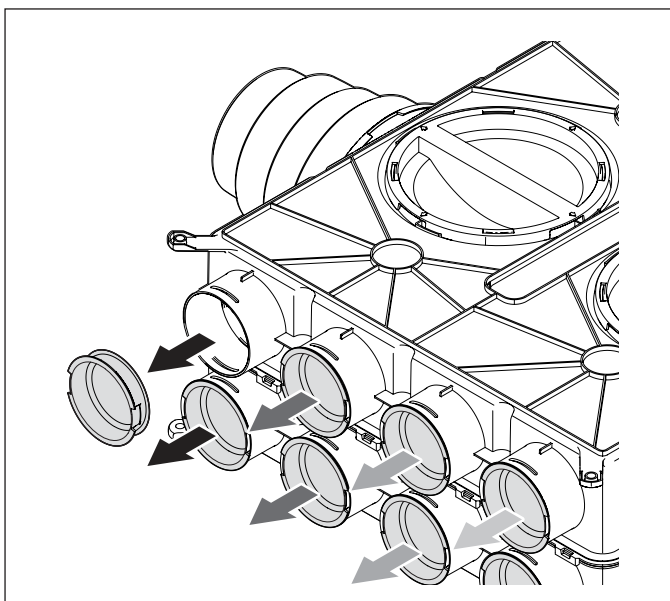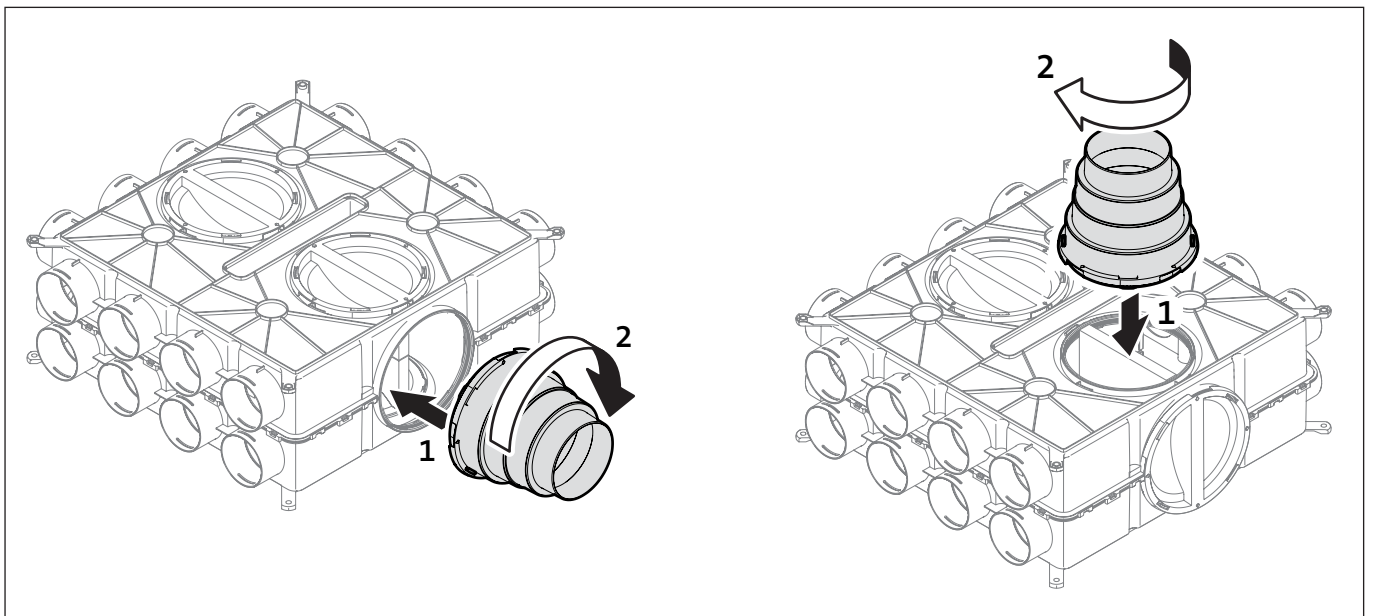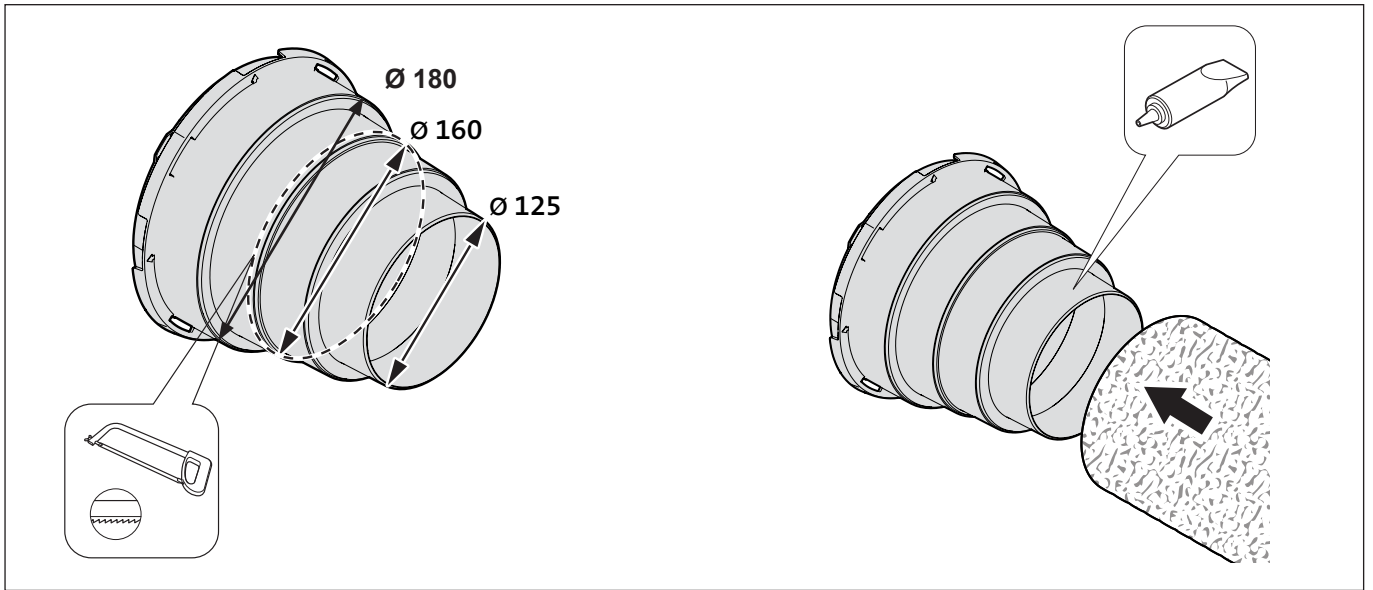


Ø75

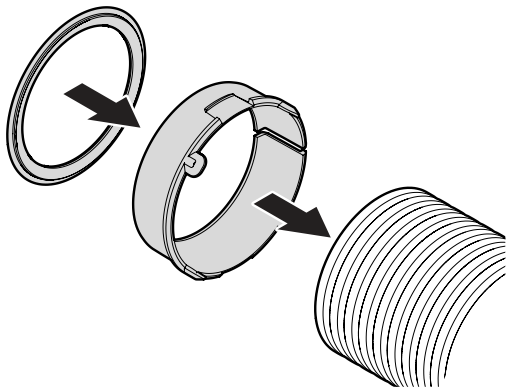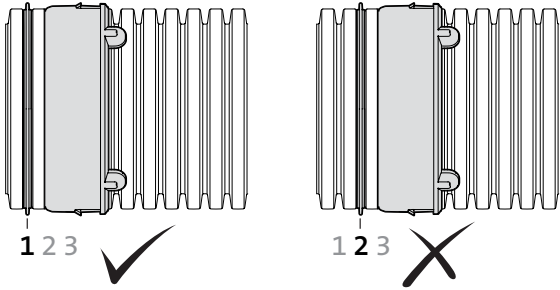


Ø75

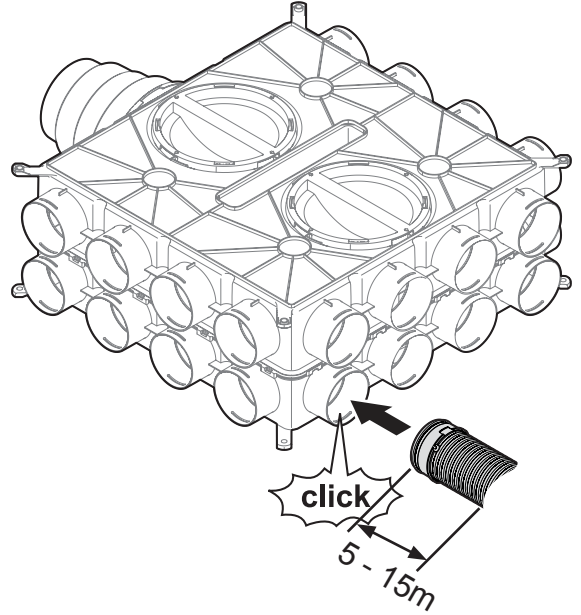


Ø63

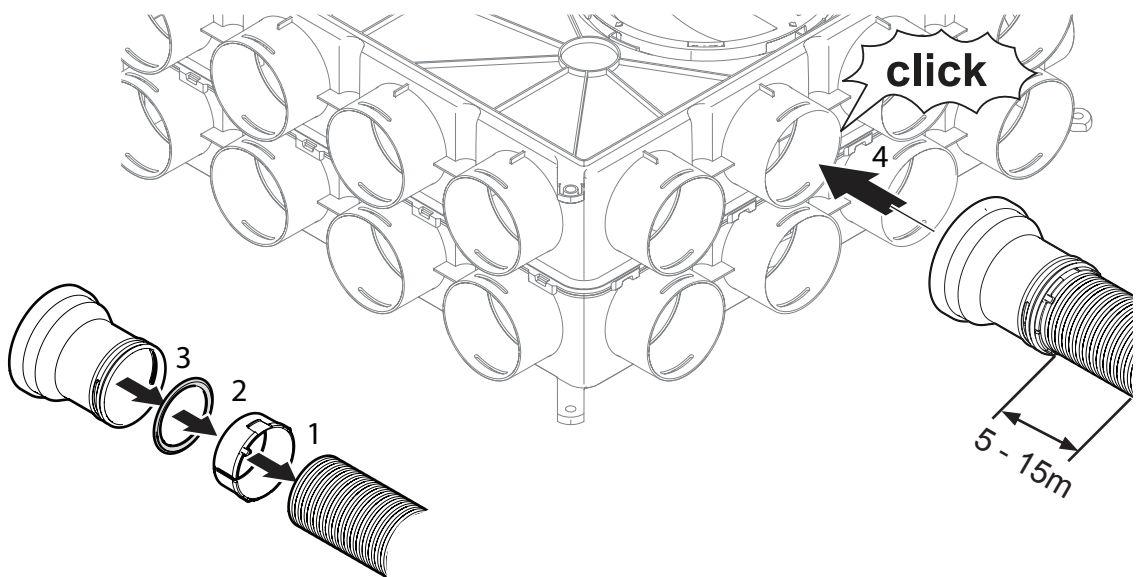


50x100

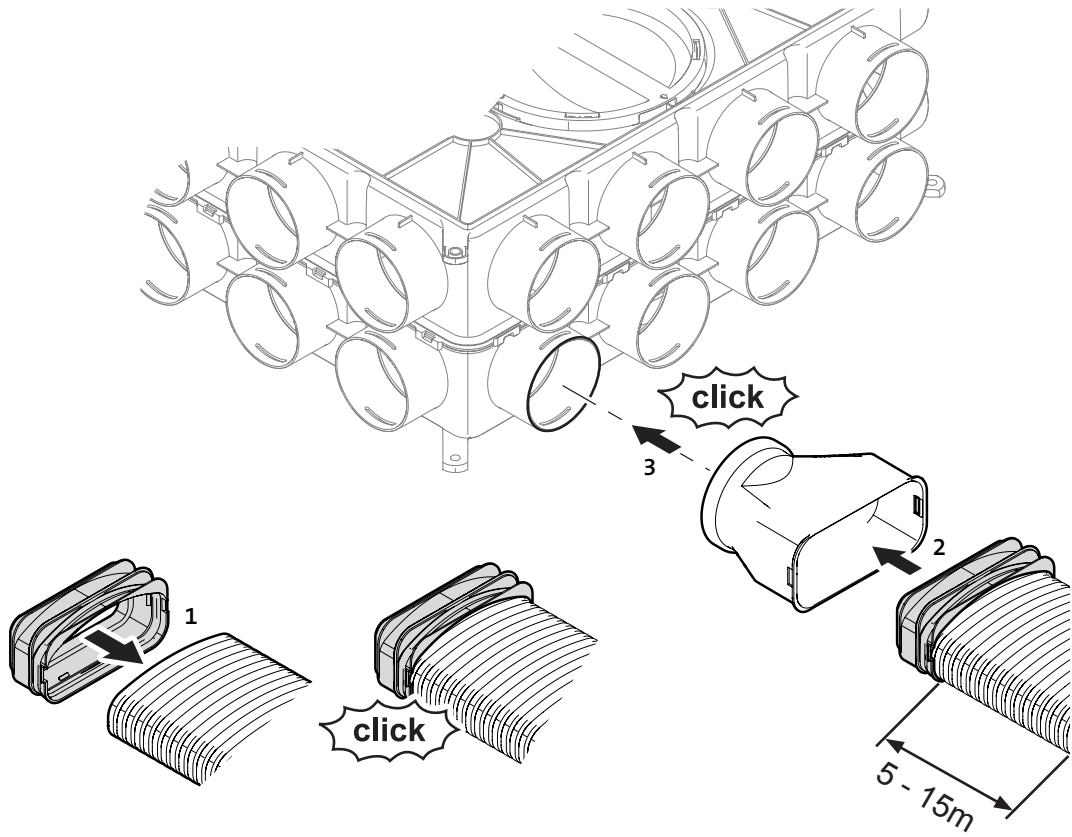


## 50x140




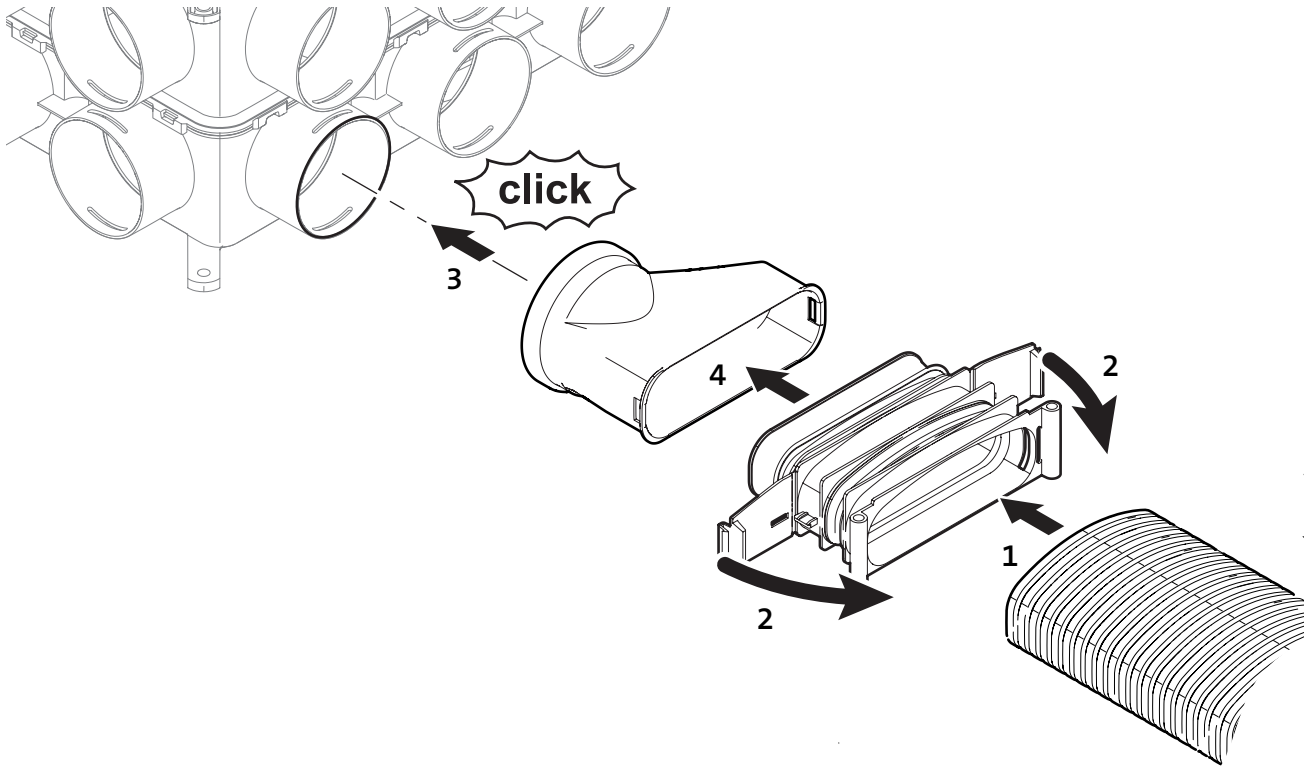


## 50x140

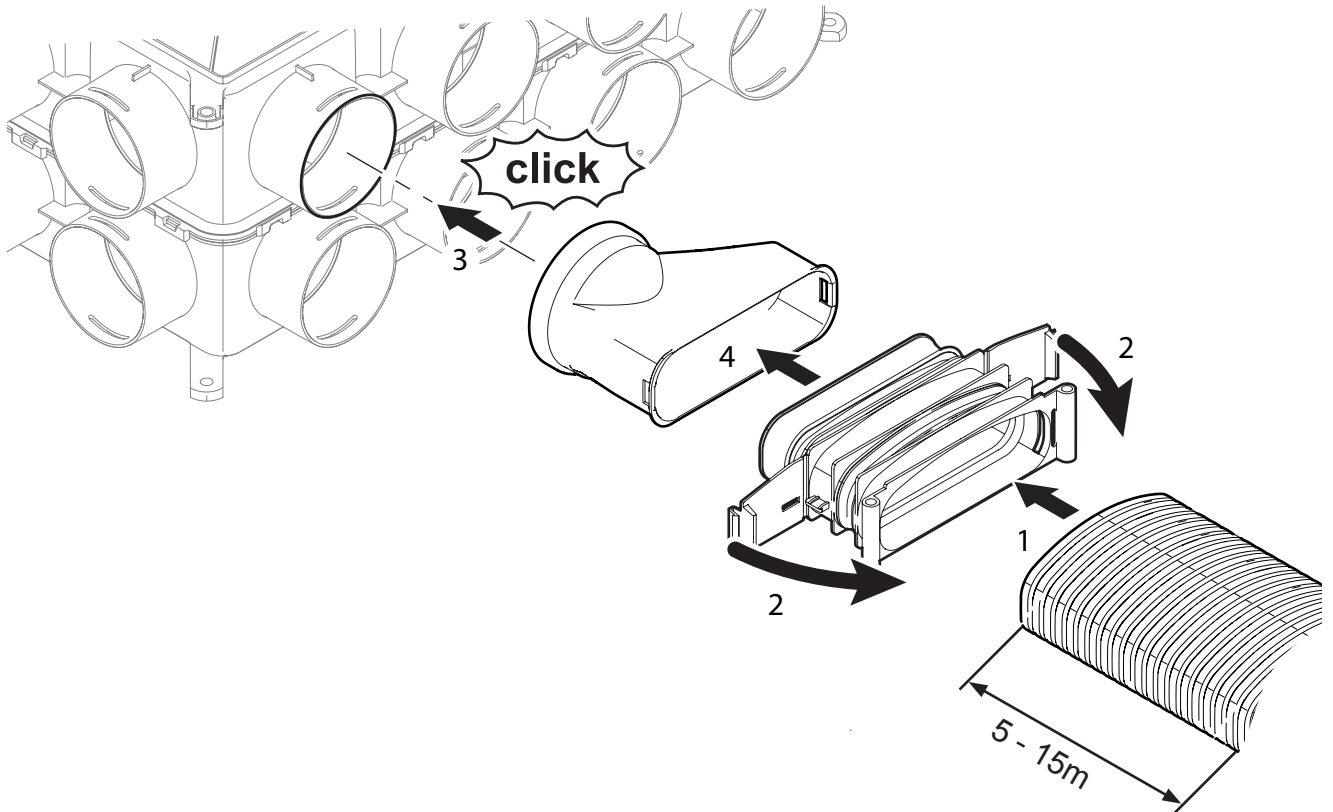

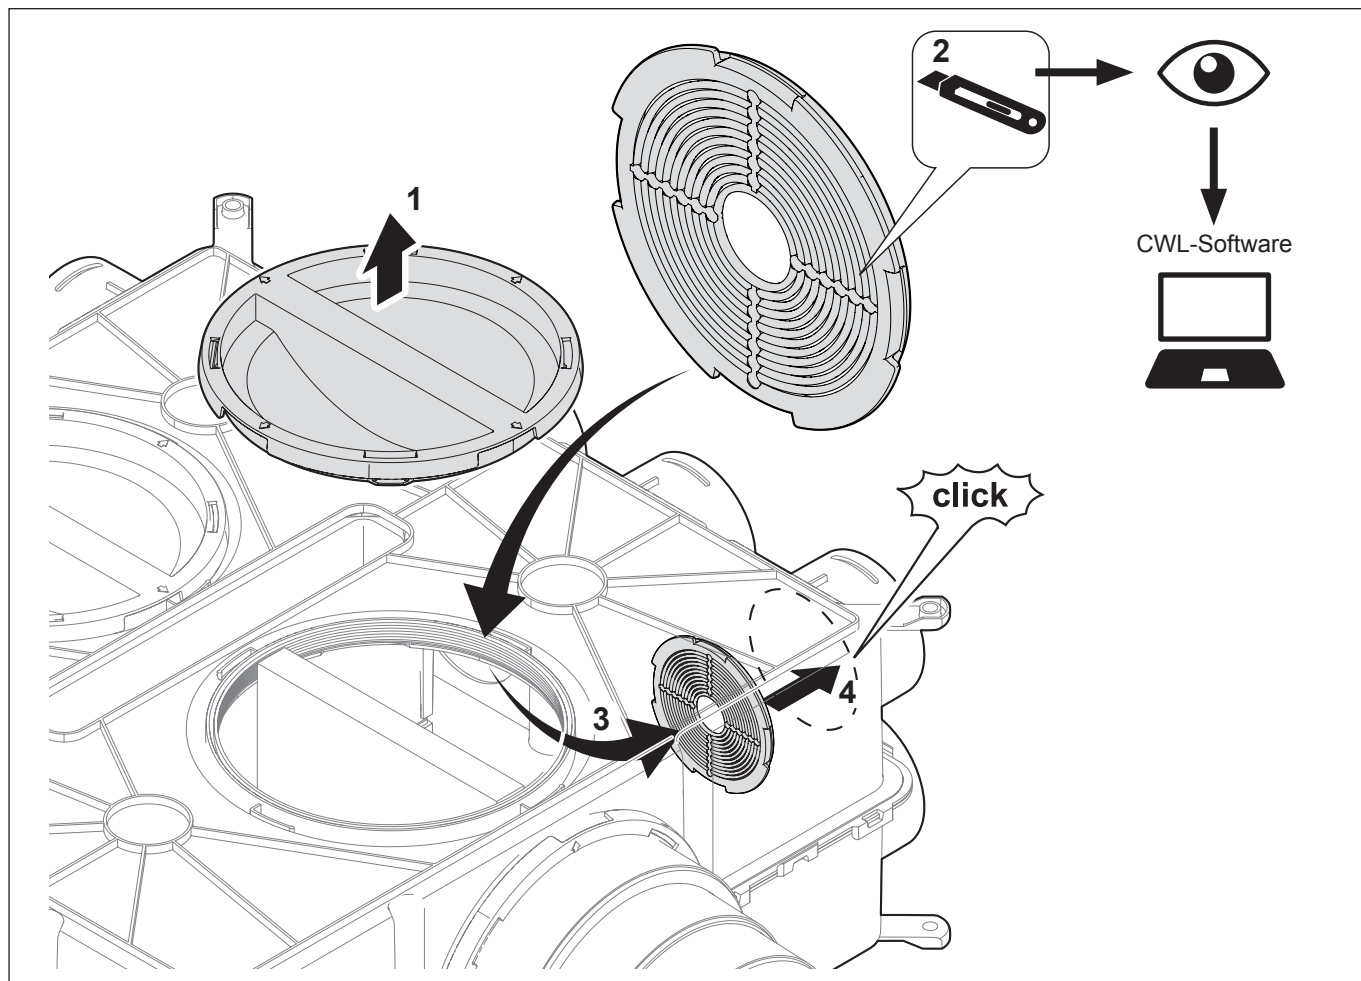



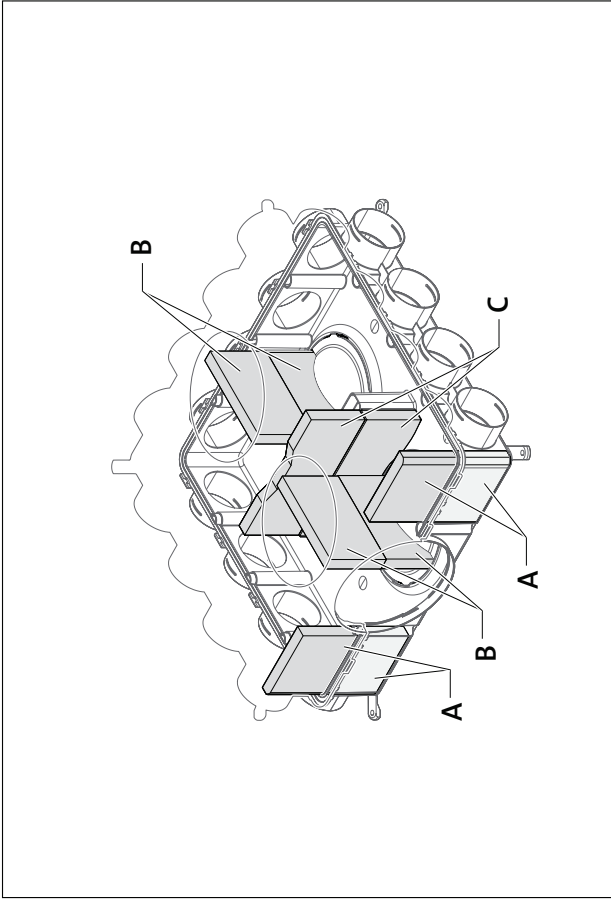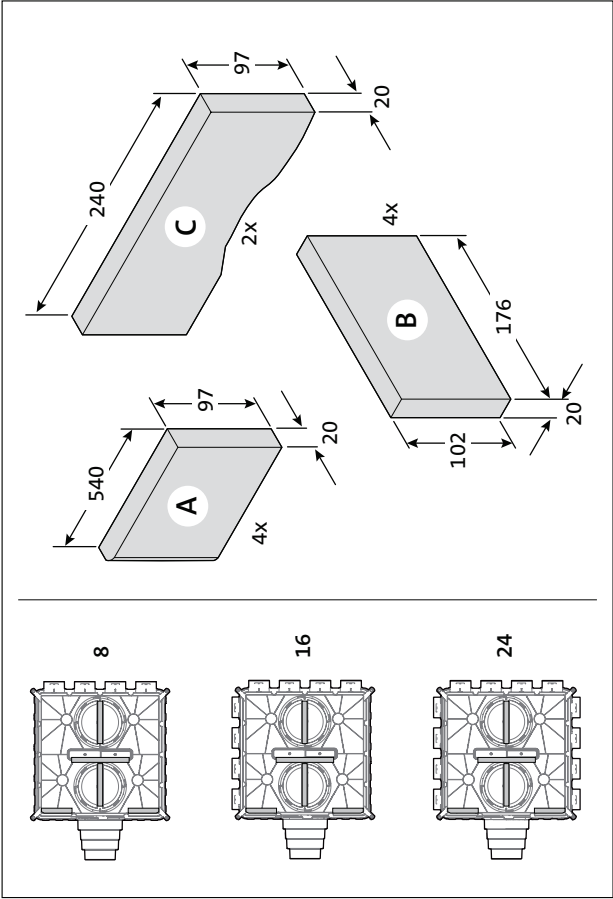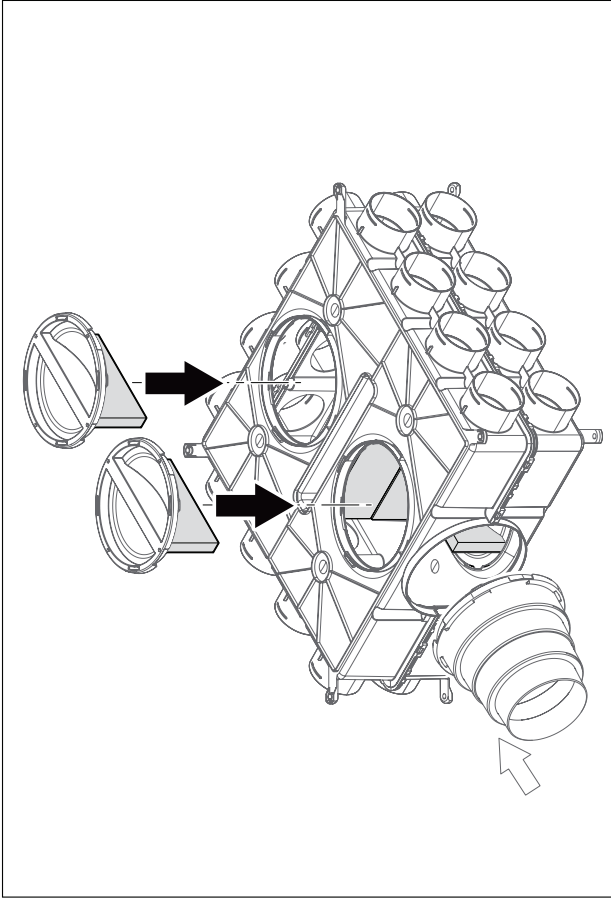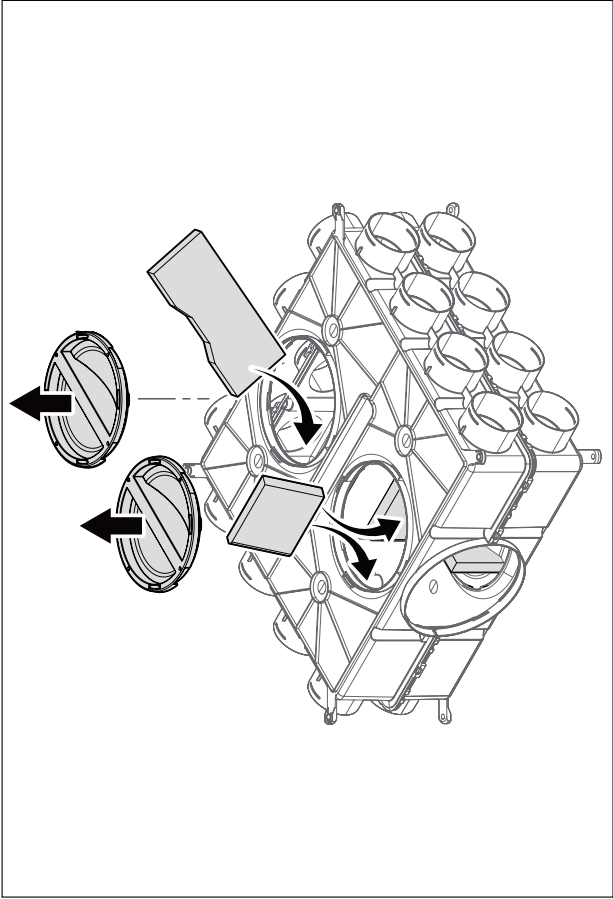









WOLF GMBH

POSTFACH 1380 / D-84048 MAINBURG / TEL. +49.0. 87 51 74- 0 / FAX +49.0.87 51 74- 16 00

[www.WOLF.eu](http://www.WOLF.eu)

**CWL**

**3064705\_201611 Änderungen vorbehalten**